


## Maus-Adapter 63840

### Description

The Maus-Adapter makes it possible to use the Roco® Lokmaus 2® as a hand controller with the Intellibox, DAISY System or the TwinCenter in order to control locomotives. Programming functions which are provided digital center are not available to the Lokmaus 2 for technical reason.

### Connection

The Maus-Adapter is connected to the LocoNet with the supplied LocoNet cable. Use the LocoNet-B output of the Intellibox or TwinCenter or the Power 2 output on a DAISY system.

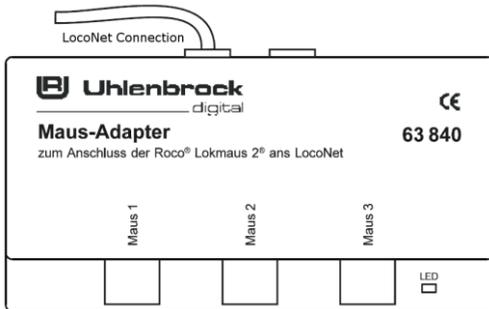

The red LED shows the activity on the X-Bus.

The adapter can accommodate a maximum of 3 Lokmice.

### NOTE:

*Never* connect a Lokmaus directly with the LocoNet without using the adapter.

*Never* use a LocoNet cable to connect the Lokmaus to the Maus-Adapter.

The Lokmaus will sustain damage in both cases.

### Configuring the Lokmaus

When using with the Maus-Adapter the Lokmaus must be assigned an "X-Bus address" and the automatic Lokmaus configuration must be switched off.

The Lokmice connected to a Maus-Adapter must be assigned different addresses. Use X-Bus addresses 1 to 31.

- Connect the Maus-Adapter to the LocoNet.
- Switch the digital center to which the adapter is connected via the LocoNet.
- Insert the Lokmaus into the Lokmaus socket of the adapter while pressing its [P]-key.
- Press the [up]-key as often as it takes for "C0" to appear in the display.
- Press the [P]-key. The display will indicate the actual X-Bus address of the Lokmaus.
- Press the [up]-key repeatedly until the desired address appears in the display.
- Press the [P]-key. The display will show "C0" again.
- Press the [up]-key repeatedly until "C2" appears in the display
- Press the [P]-key and a number will appear in the display
- Repeatedly press the [up]-key until the display shows "00". If it is already "00" go directly to the next point.
- Press the [P]-key again and the display reverts to "C2".
- Keep pressing the [up]-key until the display shows "CA".
- Press the [P]-key and a number will appear.
- Repeatedly press the [up]-key until the display shows "00". If it is already "00" go directly to the next point.
- Press the [P]-key again and the display reverts to "CA".
- End the configuration of the Lokmaus by pressing the "STOP" key.
- Disconnect the adapter from the LocoNet and plug it in again to activate the configuration.

The configuration is carried out only once for each Lokmaus.

	<b>0 20 45</b> <b>85 83 27</b>	If you have any questions call us. Hotline times are: Mon - Tue - Thu - Fri., 14:00-16:00 and Wednesdays 16:00-18:00
---	-----------------------------------	--

This product has two year warrantee.

If it is defective send decoder along with the receipt of purchase to the following address: